


# LTE/Ethernet RAB Placement Diagram

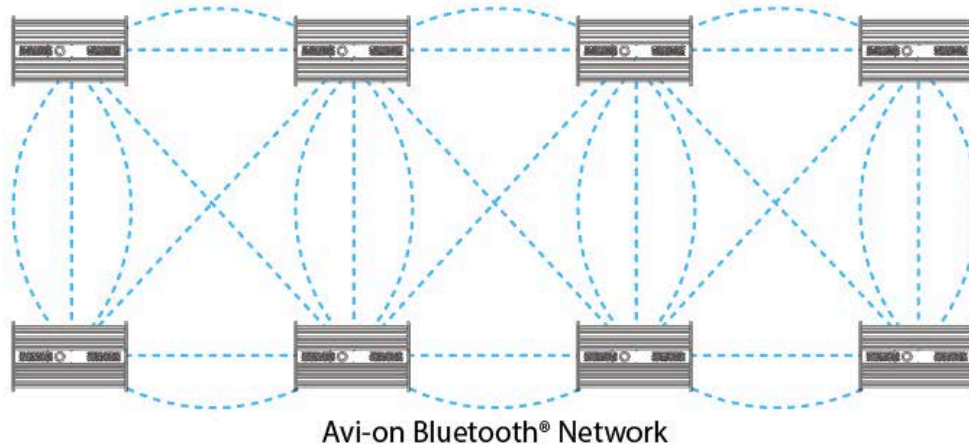

Insert Avi-on USB Bluetooth® Dongle to connect to the Avi-on Network



Place LTE RAB within 10' - 40' of a single Avi-on device



## CHOOSE A LOCATION WITH THE FOLLOWING

- **STRONG 4-bar cellular coverage.** Use your phone to validate cellular coverage
- **SECURE with reliable power** and LTE RAB will operate undisturbed
- **Within 10 to 40 feet** of the closest Avi-on Bluetooth node. The actual distance in your facility will depend on how/where things are installed and the cellular strength in your location\*
- If you desire to use the **Ethernet option**, locate the LTE RAB near an Ethernet port, and connect an Ethernet cable to the WAN port on the LTE RAB

ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. The information contained herein is believed to be reliable. Avi-on makes no warranty, representation or guarantee regarding the information contained herein, the suitability of the products for any particular purpose, or the continuing production of any product. Avi-on assumes no responsibility or liability whatsoever for the use of the information contained herein. The information contained herein, or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information.