


Wall Stations

AC Scene Controllers, Dimming Wall Stations, and 2-Button Wall Stations

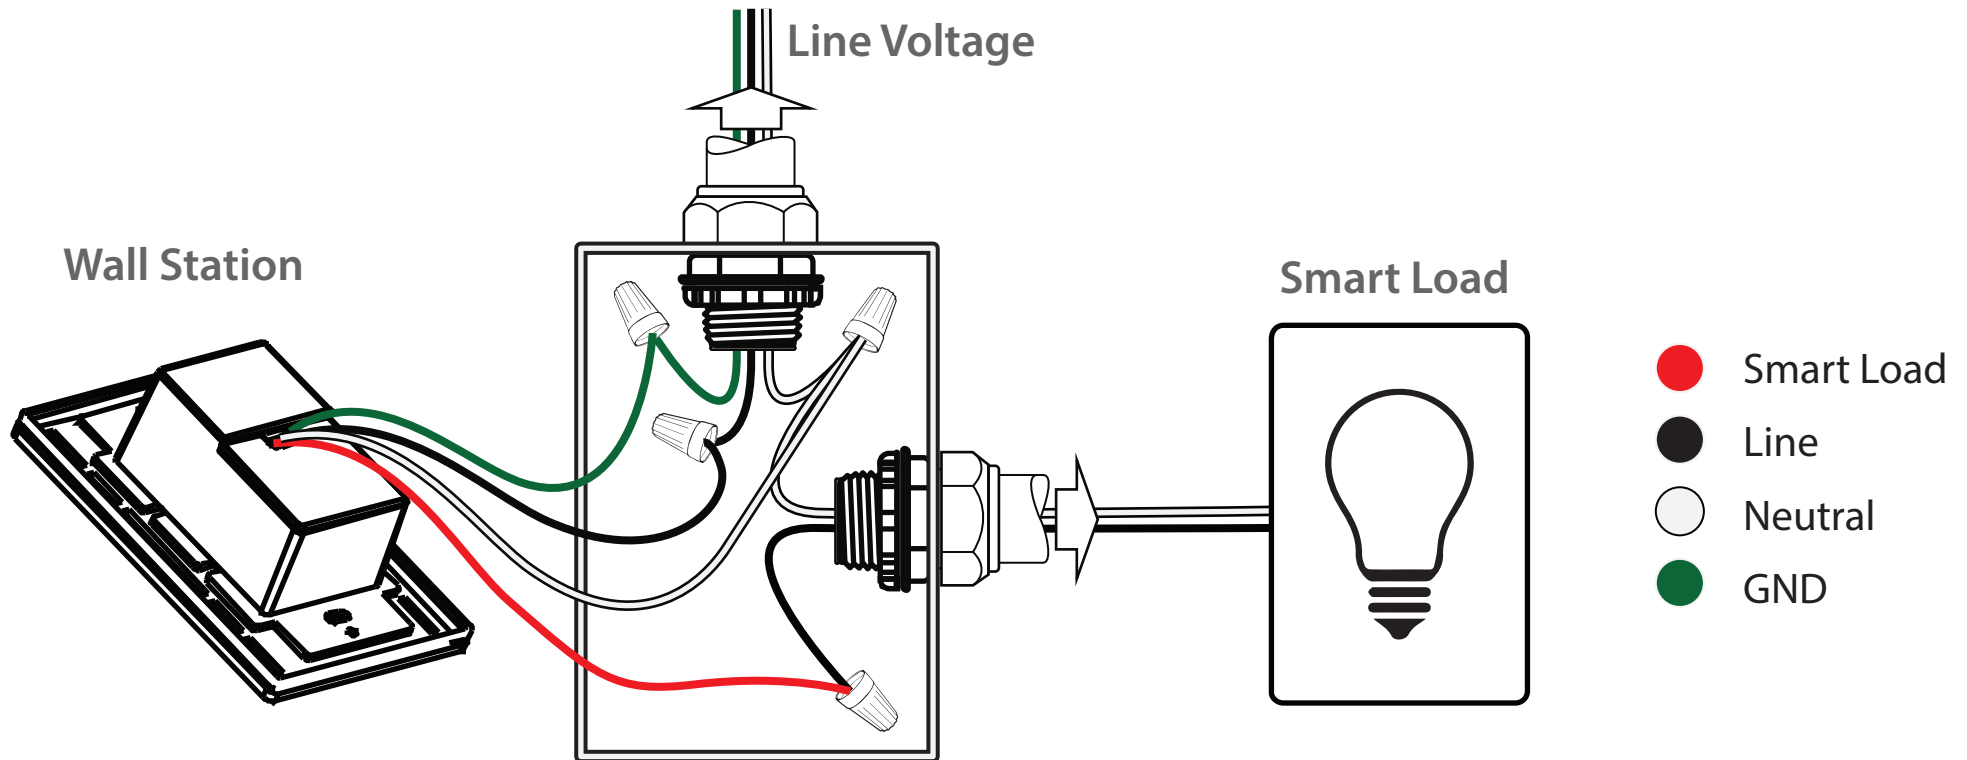

Note: *If the switch is not used to pass power to the load, the RED wire must be capped and is not used. If used as a power pass through, connect the load to the RED wire. The load power can be interrupted using the air gap tab on the front panel.*