

# Project Checklist



Scan QR for a digital copy of this page



## 1) Host Pre-Wire Training with Electricians

- Review wiring diagrams, floorplans, building codes
- Validate fixture drivers are compatible with Avi-on
- Put Avi-on QR stickers on outside of fixtures
- Review ZoneScanner Tool
- Instruct electricians to remove legacy contactors, switches, sensors, & BMS/BCS



Avi-on Resources



Fixture Assembly

## 2) Set Up Project Location & LTE Bridge


- Login to Avi-on Mobile Commissioning App
- Ask to join project's digital location at Avi-on.com/Contact
- Plug in and power the Avi-on LTE Bridge at site near controls



LTE Bridge Guide

## 3) Assign zones & names to Avi-on devices

- Download ZoneScanner Tool; use it to create zones
- Scan Avi-on ARs & assign devices to zones
- Use Mobile App to download ZoneScanner data & automatically name devices

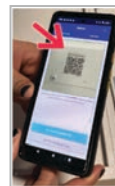

ZoneScanner  
Data Import

## 4) Disable Legacy Controls; Commission & Close Out Project

- Follow Avi-on commissioning checklists for mobile or pro
- Verify all Avi-on controls are powered 24/7. Power cuts from legacy controls may cause lights to flicker; it also may cause sensors, groups, or schedules to behave erratically



Mobile User Guide



Pro User Guide